

 
QUICK GUIDE

The temperature scale in the centre will be orange and red when the heating is on

Target temperature

Text relating to left hand button. Use this to enter the menu

Left hand button

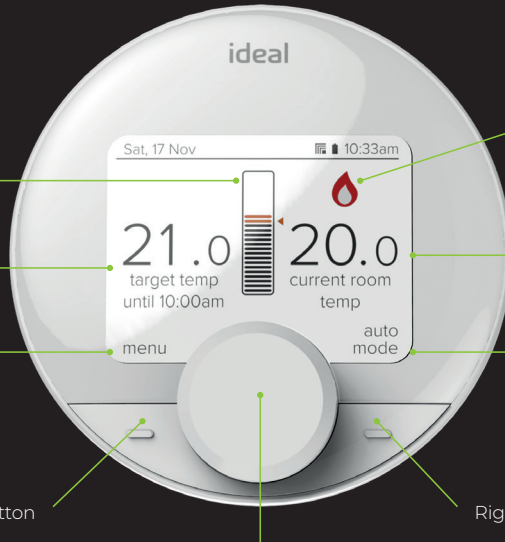

The flame symbol is present if the heating is on

Current temperature is the current temperature in your home

Text relating to right hand button. Shows whether the Halo Lite RF is in auto, manual or off mode

Right hand button

Turn dial to adjust temperature or navigate menu. Push dial to select

MODE SELECTION

 
You can choose to run your Halo Lite RF in auto, manual or off mode.

Auto: runs your heating to pre-set scheduled times and temperatures.

Manual: You control the temperature by physically turning the dial.

Off: Your heating will be set to a low temperature (default 5°C) for frost protection.

Move between Auto, Manual and Off modes using the right hand side button, scroll down the menu using the dial and push to select.

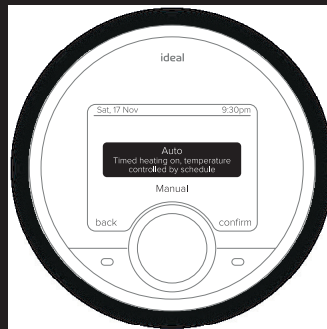

Use the dial to scroll between the different modes (Auto, Manual and Off) and then push the dial or press the right hand button to confirm your selection.

TOP TIP:

Your Halo Lite RF is designed to provide the **perfect balance of comfort and efficiency**. It has a feature called Enhanced Load Compensation which balances the temperature in your radiators to maintain the target room temperature with optimum efficiency. As a result you might notice that when the temperature in your home reaches the target your radiators are not hot to touch. By controlling the temperature in your radiators **your system is working in the most efficient way for you**.

 
VERRIDE OR PLUS HOURS

If you are running a schedule with pre-set times (Auto mode) and you want to adjust the temperature of your heating temporarily then turn the dial to the required temperature. If you want to keep the current temperature instead of moving the next scheduled setting then push the dial.

In both cases a pop up menu will appear for you to select how long you want to either change the temperature for, or maintain the temperature for. Simply turn the dial and push to make your selection.

The home-screen will now display the override icon above the target temperature.


Turn the dial to temporarily adjust the temperature

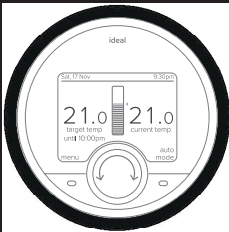

Push the dial to extend the current heating period.



 Select how long you would like to override the schedule for.

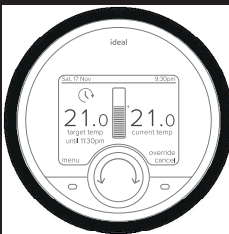


Push the dial to confirm, you will now see an override symbol on the screen.

SCHEDULES


Your Halo Lite RF will come with a pre-set schedule:

- 6:00 – 8:00 **21°C**
- 8:00 – 16:00 **OFF**
- 16:00 – 22:00 **21°C**
- 22:00 – 6:00 **OFF**

 
You can alter this schedule by entering the “timed heating schedule” section in the main menu.

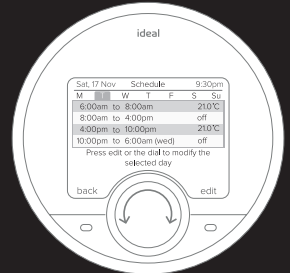

 Turn the dial to move between the different days and view the schedule that is set. To edit a day, push the dial or right hand button when the day is highlighted in light blue.

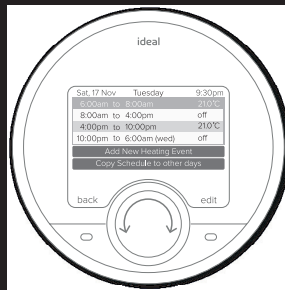

 Push the dial to edit a heating time or temperature when it is highlighted in light blue. You can also add an additional heating period by scrolling and pushing on the “Add new heating event” bar. You can have up to 6 heating events per day in your schedule.

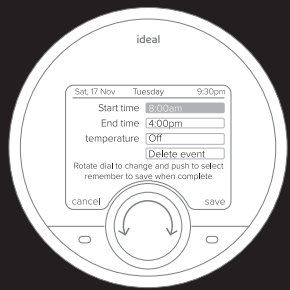

Alter the start and end times of the heating period and the temperature by scrolling and then pushing the dial to edit. Then use the dial to alter the time or temperature and push to confirm. Push the dial or the right hand button to save your changes.